



towel warmer

User Guide

01000

- Please read the following instructions and warnings carefully.
- Keep these instructions for future reference.

Features & Components



Important Safety Warnings

⚠ WARNING! IMPORTANT SAFEGUARDS. PLEASE READ AND SAVE THESE INSTRUCTIONS

This product is not a toy. DO NOT allow children to play with it.

When using electrical appliances, basic safety precautions should always be followed including the following:

- Read all instructions
- Do not touch hot surfaces with fingers.
- To protect against electrical shock, do not immerse the product or its power cord and plug in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Surface wash ONLY with a damp cloth.
- DO NOT put any liquid inside the product.
- DO NOT submerge in water.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment.
- DO NOT use any accessories or attachments not recommended by Baby's Journey.
- This product is for indoor household use only. Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- To operate, plug cord into wall outlet. To disconnect, remove plug from wall outlet.
- Do not use appliance for other than its intended use.
- A short power-supply cord is provided to reduce the risk resulting from becoming entangled in or tripping over a longer cord.
- DO NOT use an extension cord with this product.
- This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.

Care and Maintenance

Cleaning

- Surface wash ONLY with a damp cloth to keep your towel warmer free from dust.
- DO NOT immerse product in water.

Storage

- Unplug your towel warmer when not in use.
- Allow the unit to cool and store out of reach of children in a safe, dry location.
- Handle power cord carefully to prolong life. Firmly grasp the plug, not the cord, when removing from the wall outlet.

Troubleshooting

Problem	Solution
Towel warmer failed to turn on.	Make sure towel warmer is properly plugged into the wall outlet. Ensure Ground Fault Circuit Interrupter is functioning properly. NOTE: To test the Ground Fault Circuit Interrupter for proper function, turn on the Towel Warmer and press the TEST button on the plug. The Towel Warmer should immediately turn off. Pressing the RESET button will restore power to the Towel Warmer.
Towel warmer is taking too long to warm towel.	Use only dry towels. Using a damp towel will greatly extend the recommended 10-minute warming cycle.
Towel warmer will not work two times in a row.	Allow the towel warmer to cool down before subsequent uses. Make sure red Hot Surface Caution Light is off.

Set-up and Use of your towel warmer

Your Towel Warmer will warm a bath towel measuring approximately 40 in. x 70 in. For best results make sure towel has been previously washed and dried if brand new.



1 Place Towel Warmer on a dry, level and hard surface. Insert plug into a standard 120V AC outlet. Open lid and place your towel inside. Close the lid.



2 Press On button. The green Temp Heating Light will illuminate, indicating that the unit is warming the towel. If needed, the warming session can be interrupted at any point by removing plug from AC outlet.

Note: The red Hot Caution Light will illuminate, indicating that the surfaces of the towel warmer are hot to the touch. Please handle carefully.



3 The green Temp Heating Light will turn off after approximately 10 minutes, indicating that the internal heater has automatically switched off. You may use your towel at this time or wait for up to a max of 20 minutes prior to using.

IMPORTANT: The red Hot Surface Caution Light must go off signifying that the unit has cooled down before the Towel Warmer can be used to heat additional towels.

FCC Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This Class B digital apparatus complies with Canadian ICES-003.

Consumer Support

Baby's Journey stands behind all of its products. If you are not completely satisfied or have any questions, please contact our Consumer Care Team at 1-855-422-2975 or email us at wecare@babysjourney.com.

For replacement parts information or to view the Baby's Journey family of products visit www.babysjourney.com.